



## WEATHER-STRIPPING SYSTEM

## Easy Stop Weather Stripping 1/2" Kit Installation Instructions

Detailed instructions:

### CAUTION!

Easy-Stop Weather stripping is "handed". Please look for the left and right side. (Standing inside the window opening, facing out.)

- Make a pencil mark at the center location of the meeting rail on the window jam.
- Remove inside stop; remove lower sash and existing parting stop.
- Measure and cut the short length (42" length for 1/2" kit) of Easy-Stop and install at top of window jam.



**Figure 1.** Begin by removing all existing parting-stops. (Aka parting-bead)



**Figure 2.** Measure for upper piece (42" stop)



**Figure 3.** Cut and fit Easy-Stop head piece. Pile faces outwards.

- Measure from the pencil line to the bottom of the newly installed Easy-Stop. Transfer this measurement from the center of the Easy-Stop to the top. Mark and cut top.
- Re-measure and cut the bottom of the Easy-Stop. Install.
- Repeat procedure for the other side.



**Figure 4.** Measure the height of the upper sash.



**Figure 5.** Transfer this measurement from the middle of the pile to...



**Figure 6.** ...the top of Easy-Stop. Cut at the mark.



**Figure 7.** Measure the full height of the right side.



**Figure 8.** Mark and cut the bottom.



WEATHER-STRIPPING  
SYSTEM

**Easy Stop Weather Stripping 1/2" Kit Installation Instructions**



**Figure 9.**  
Install right side




**Figure 12.**  
Attach ropes and  
install upper sash.



**Figure 15.**  
For the lower sash, cut 1/8" by 3/8" kerf on the  
bottom. This is where the silicon flap will go.




**Figure 10.**  
Install right side

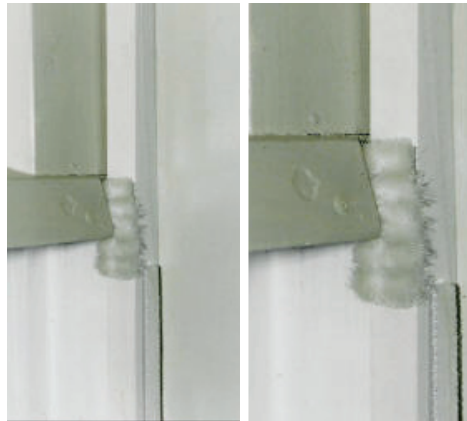

**Figure 13.**  
Note position of up-  
per sash with pile.

**Figure 14.**  
Detail of Figure 13.

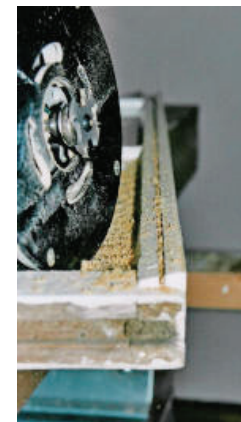

**Figure 16.**  
Again on the  
lower sash, cut  
1/8" by 3/8" kerf on  
the meeting rail.  
This is where the  
barbed-pile will go.



**Figure 11.**  
If necessary, plane  
for a snug fit. If  
loose, glue or nail in  
place.

- Cut a 1/8" by 3/8" groove on the outside edge of the lower sash at the center of the meeting rail. Install barbed pile weather-stripping (provided).
- Cut the same 1/8" by 3/8" groove at the bottom of the lower sash. Install silicone "flap" weather-stripping (provided)
- Reinstall sash and inside stop moldings.



**Figure 17.**  
Install silicon flap on bottom.



## WEATHER-STRIPPING SYSTEM

## Easy Stop Weather Stripping 1/2" Kit Installation Instructions



**Figure 18.**  
Install barbed-pile at meeting rail.

### Additional Tips:

- To install the 3rd piece of Easy-Stop it may be necessary to slide the upper sash completely down.
- Use gentle pressure to secure the Easy-Stop in the groove. Excessive pressure may cause breakage.
- Scissors can be used to trim the meeting rail pile.
- Easy-Stop can be secured in place by a compression fit only. May be additionally secured using acrylic caulk or brad nails.
- Easy-Stop can be painted just like wood, may also be left unpainted.



**Figure 20.**  
Complete paint and any touch-ups.



**Figure 19.**  
Install lower sash and interior stop.



**Figure 21.**  
You are now finished with the installation.

Want to find out more?  
Do you have additional questions?

Please contact us:  
ADVANCED REPAIR TECHNOLOGY  
PO Box 510, Cherry Valley, NY 13320

607-264-9040 office  
607-264-8307 fax

[www.advancedrepair.com](http://www.advancedrepair.com)

**Questions?**  
Try our Technical Support Hot Line!  
**607-264-9040**