



WEATHER-STRIPPING SYSTEM

Easy Stop Weather Stripping 3/8" California Kit Installation Instructions

Detailed instructions:

CAUTION!

Easy-Stop Weather stripping is "handed". Please look for the left and right side. (Standing inside the window opening, facing out.)

- Make a pencil mark at the center location of the meeting rail on the window jam.
- Remove inside stop; remove lower sash and existing parting stop.
- Measure and cut the short length (42" length for 1/2" kit or 3/8" California Kit) of Easy-Stop and install at top of window jam.



Figure 1. Begin by removing all existing parting-stops. (Aka parting-bead)

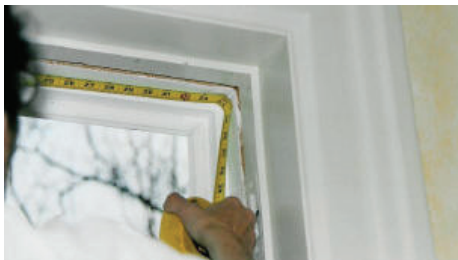


Figure 2. Measure for upper piece (42" stop)



Figure 3. Cut and fit Easy-Stop head piece. Pile faces outwards.

- Measure from the pencil line to the bottom of the newly installed Easy-Stop. Transfer this measurement from the center of the Easy-Stop to the top. Mark and cut top.
- Re-measure and cut the bottom of the Easy-Stop. Install.
- Repeat procedure for the other side.



Figure 4. Measure the height of the upper sash.



Figure 5. Transfer this measurement from the middle of the pile to...



Figure 6. ...the top of Easy-Stop. Cut at the mark.



Figure 7. Measure the full height of the right side.



Figure 8. Mark and cut the bottom.



WEATHER-STRIPPING
SYSTEM

Easy Stop Weather Stripping 3/8" California Kit Installation Instructions



Figure 9.
Install right side



Figure 12.
Attach ropes and
install upper sash.



Figure 15.
For the lower sash, cut 1/8" by 3/8" kerf on the
bottom. This is where the silicon flap will go.



Figure 10.
Install right side

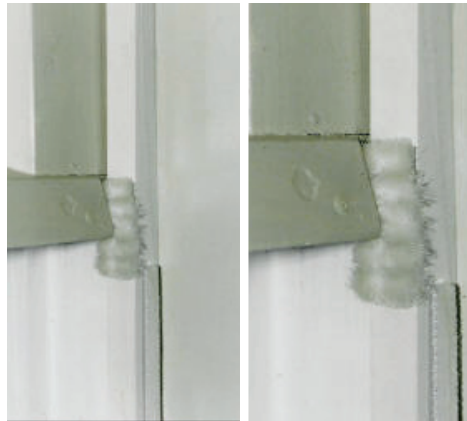


Figure 13.
Note position of
upper sash with pile.

Figure 14.
Detail of Figure 13.

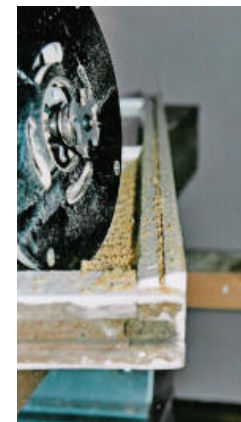


Figure 16.
Again on the
lower sash, cut
1/8" by 3/8" kerf on
the meeting rail.
This is where the
barbed-pile will go.



Figure 11.
If necessary, plane
for a snug fit. If
loose, glue or nail in
place.

- Cut a 1/8" by 3/8" groove on the outside edge of the lower sash at the center of the meeting rail. Install barbed-pile weather-stripping (*provided*).
- Cut the same 1/8" by 3/8" groove at the bottom of the lower sash. Install silicone "flap" weather-stripping (*provided*)
- Reinstall sash and inside stop moldings.



Figure 17.
Install silicon flap on bottom.



WEATHER-STRIPPING
SYSTEM

Easy Stop Weather Stripping 3/8" California Kit Installation Instructions



Figure 18.
Install barbed-pile
at meeting rail.

Additional Tips:

- To install the 3rd piece of Easy-Stop it may be necessary to slide the upper sash completely down.
- Use gentle pressure to secure the Easy-Stop in the groove. Excessive pressure may cause breakage.
- Scissors can be used to trim the meeting rail pile.
- Easy-Stop can be secured in place by a compression fit only. May be additionally secured using acrylic caulk or brad nails.
- Easy-Stop can be painted just like wood, may also be left unpainted.



Figure 20.
Complete paint and
any touch-ups.



Figure 19.
Install lower sash
and interior stop.



Figure 21.
You are now
finished with the
installation.

Want to find out more?
Do you have additional questions?

Please contact us:
ADVANCED REPAIR TECHNOLOGY
PO Box 510, Cherry Valley, NY 13320

607-264-9040 office
607-264-8307 fax

www.advancedrepair.com

Questions?
Try our Technical Support Hot Line!
607-264-9040